


FRAMED FLAT FIXED ROOFLIGHT

Typical Installation - double glazed | Option 1: Fixing from Externally

Manufactured to: **BS EN 12150 / BS EN 1279**

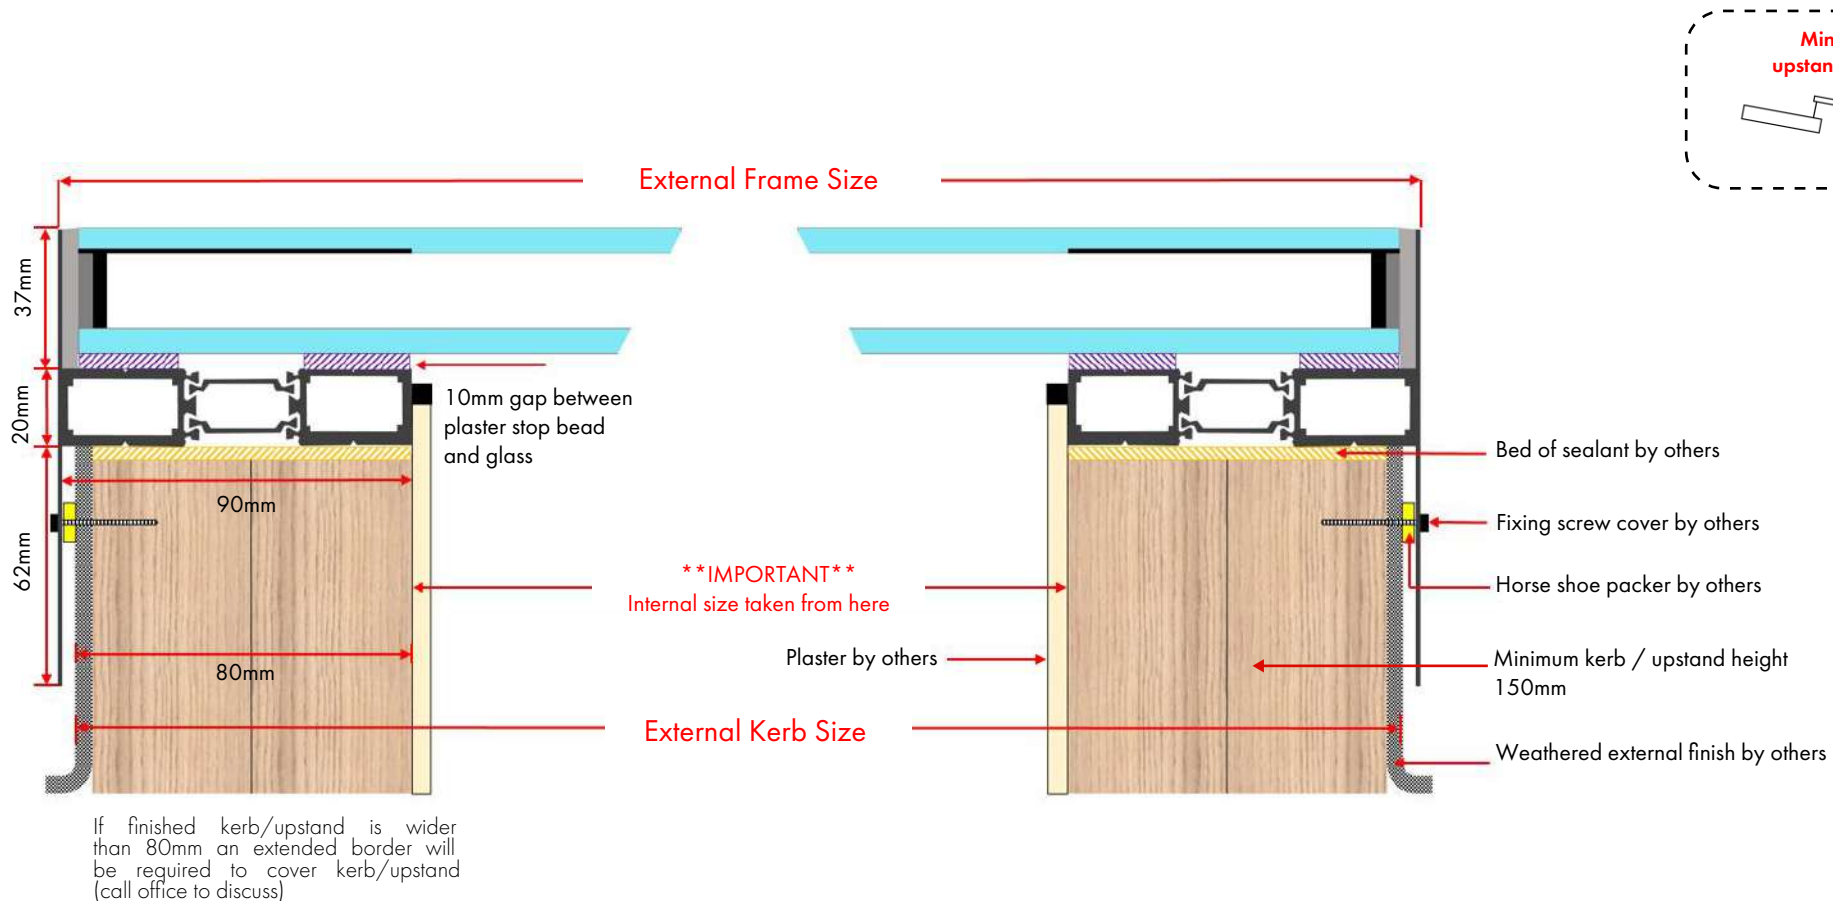

Free Delivery




Drawing not to scale. For illustrative purposes only.

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with the Building Regulations.



FRAMED FLAT FIXED ROOFLIGHT

Installation Guide - double glazed | Option 1: Fixing from Externally


- 1** Apply a thick bead of silicone all the way around the top of the timber upstand/kerb

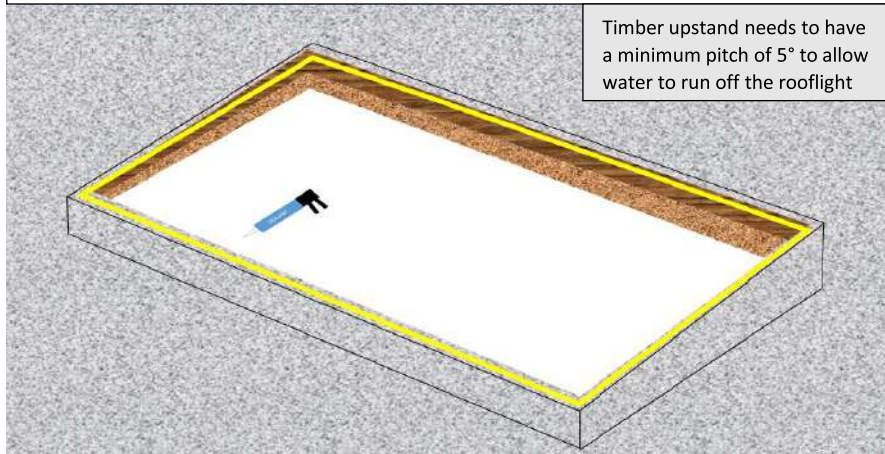

- 2** Position and lower the Rooflight frame over the top and side of the upstand/kerb

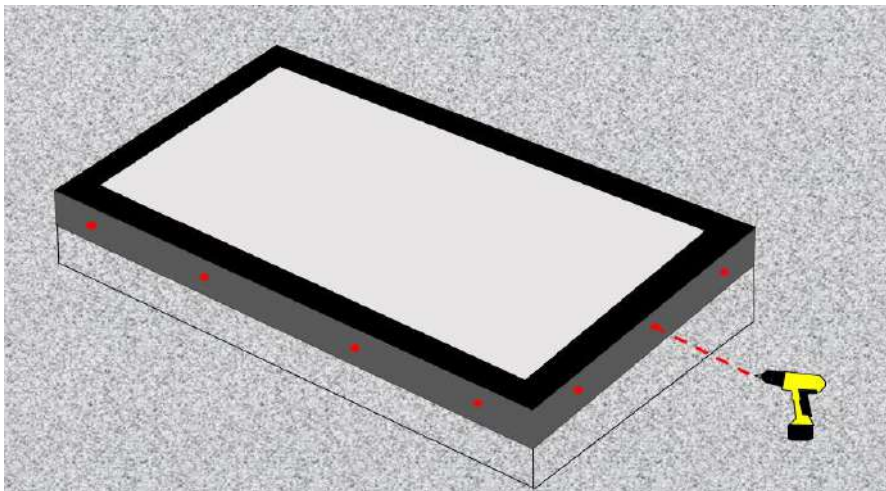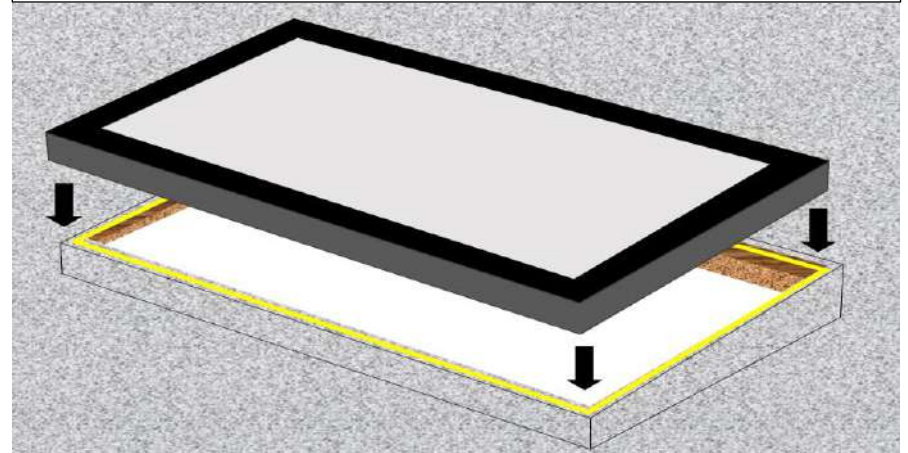

- 3** Pre drill fixing holes through aluminium and timber upstand/kerb at 100mm from each corner and then at regular intervals.

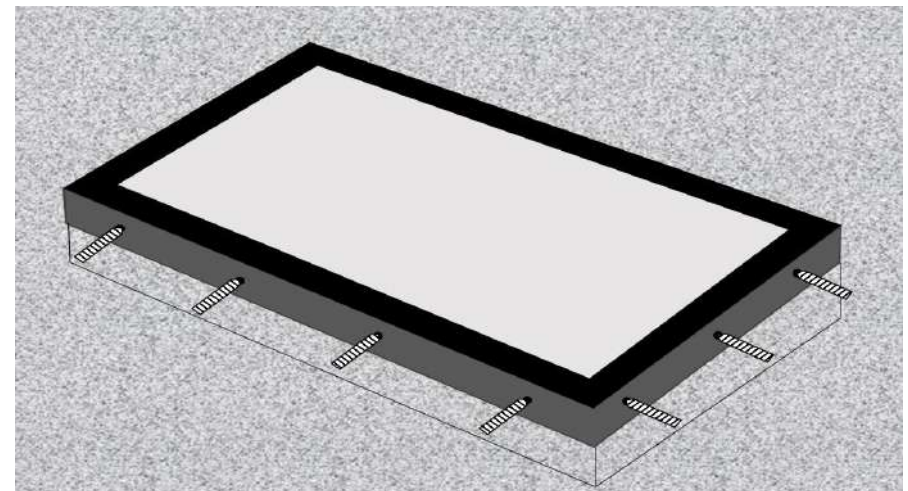


- 4** Secure fixing screws with horse shoe packers and finishing caps continuously all the way around securing the aluminium frame in place.

FRAMED FLAT FIXED ROOFLIGHT

Typical Installation - double glazed | Option 2: Fixing from Internally

Manufactured to: **BS EN 12150 / BS EN 1279**

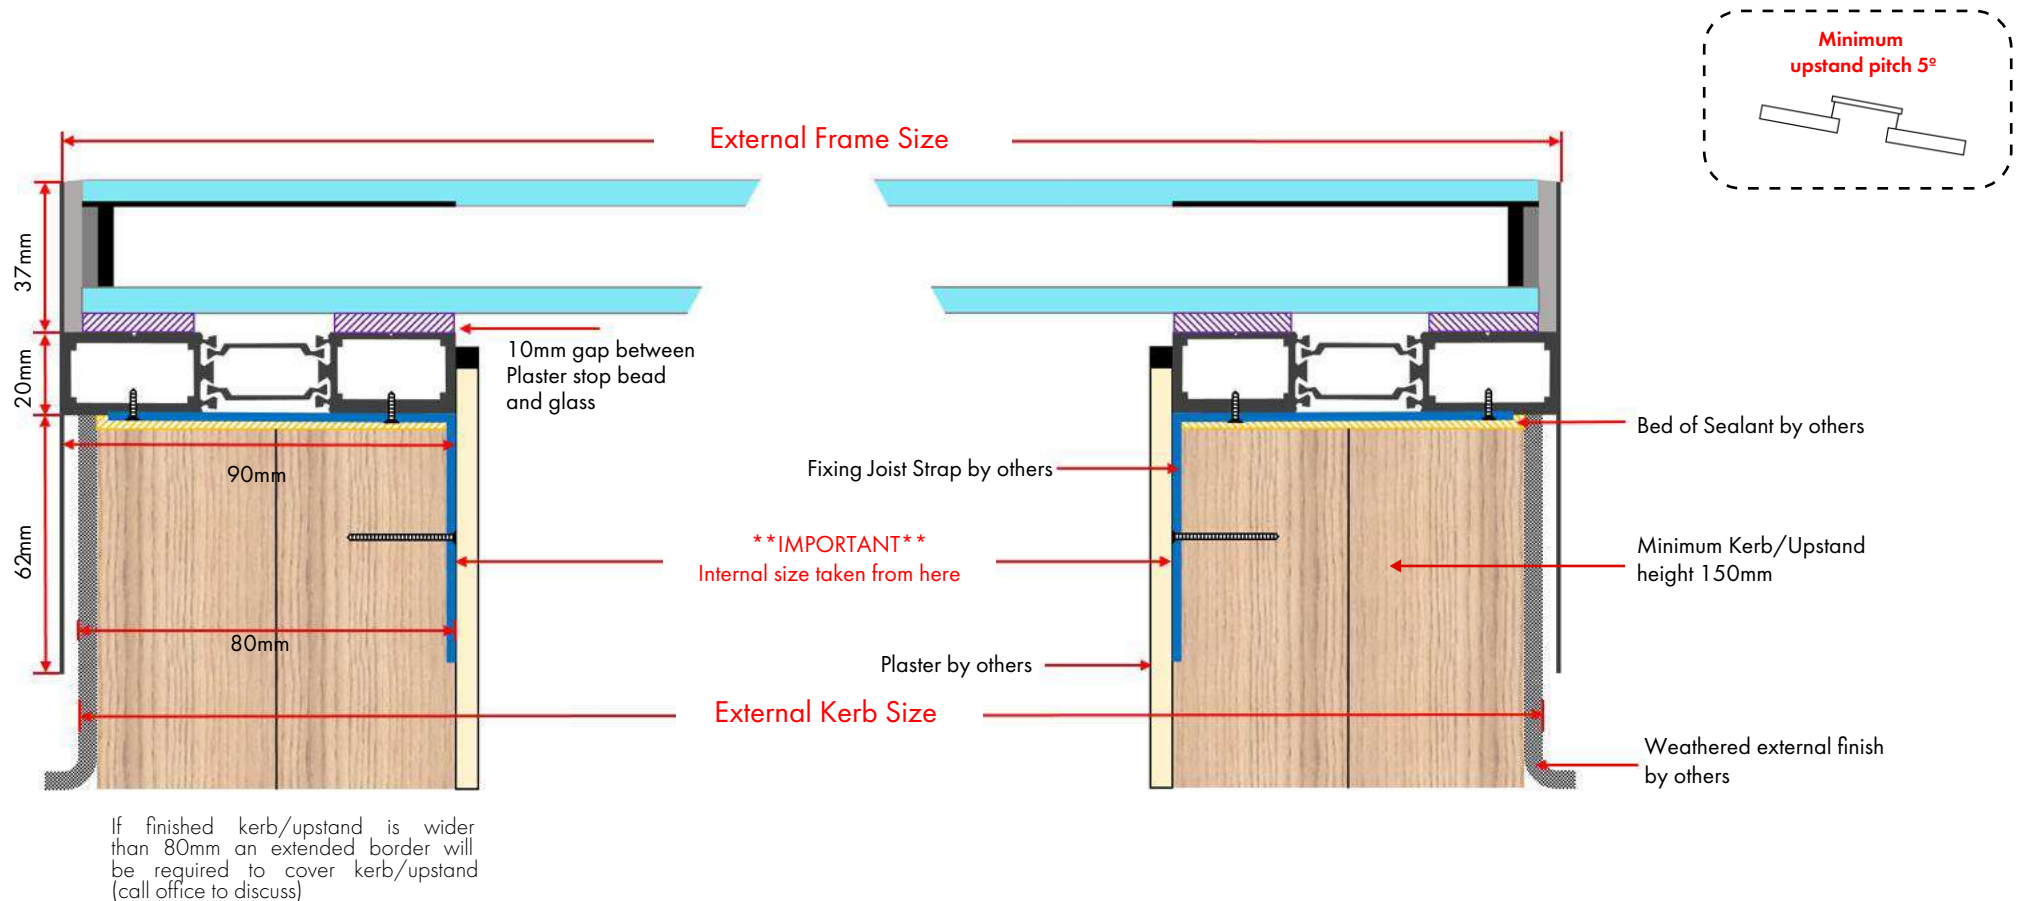

Free Delivery




Drawing not to scale. For illustrative purposes only.

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with the Building Regulations.



FRAMED FLAT FIXED ROOFLIGHT

Installation Guide - double glazed | Option 2: Fixing from Internally


- 1** Apply a thick bead of silicone all the way around the top of the timber upstand

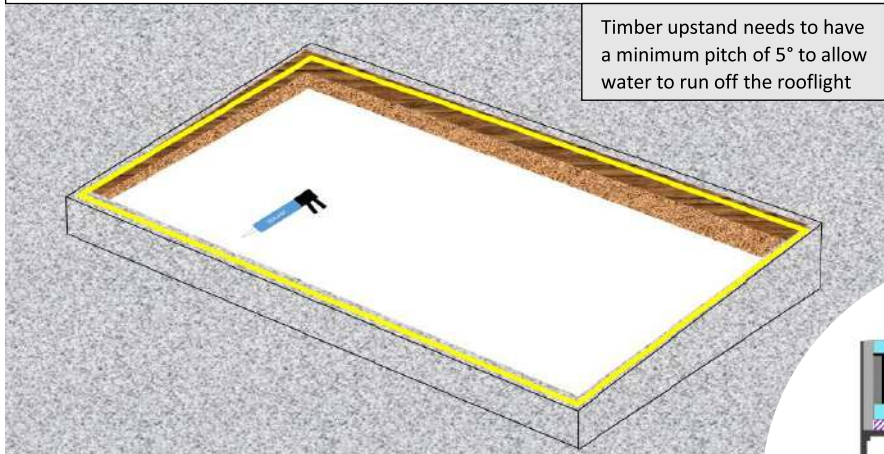


- 2** Position the Rooflight over the upstand ensuring that the fixing straps have been fixed to underside of frame (refer to diagram centre).

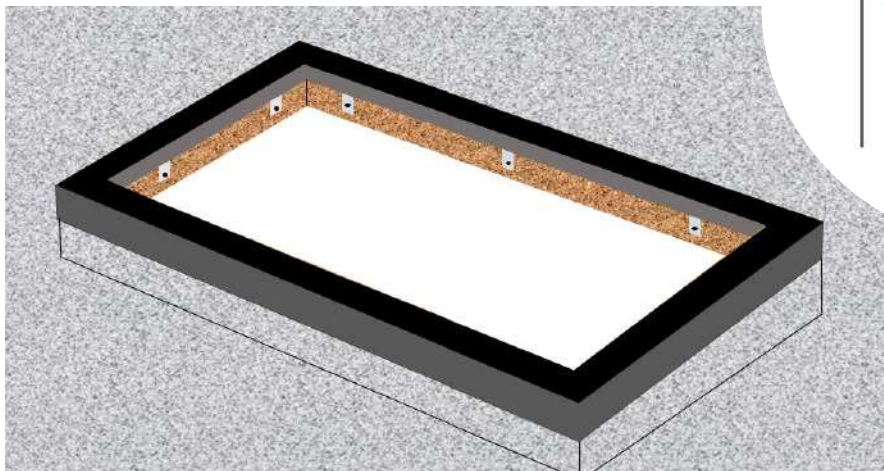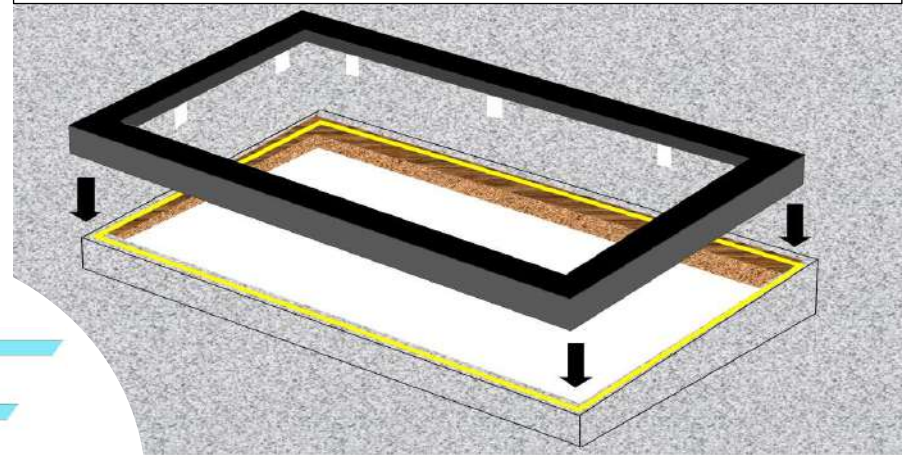

- 3** From the inside secure the fixing straps to inside the timber upstand.

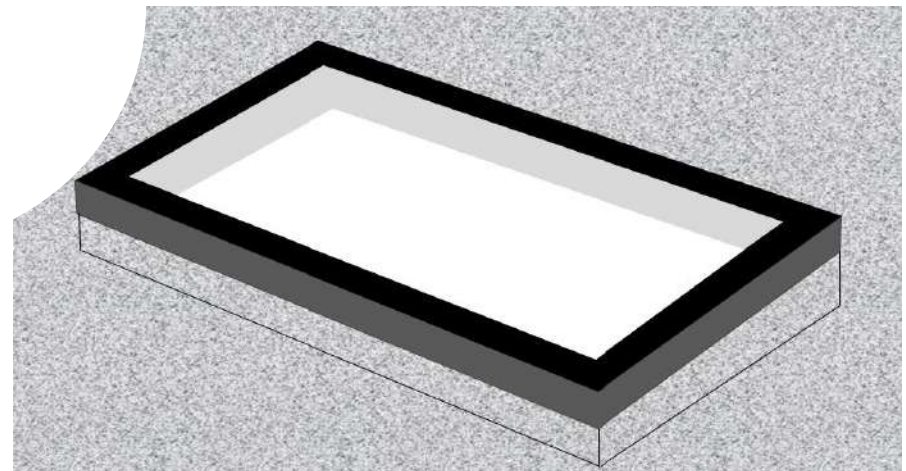

- 4** Internally finish by plaster boarding over the timber and straps leaving at least a 10mm gap from the top of the plasterboard to glass.

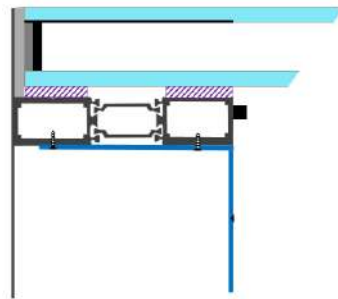


FRAMED FLAT FIXED ROOFLIGHT

Double Glazed | U-Value: 1.2 w/m²k

infinity[®]
ROOF LIGHT solutions by TuffX

Manufactured to: **BS EN 12150 / BS EN 1279**

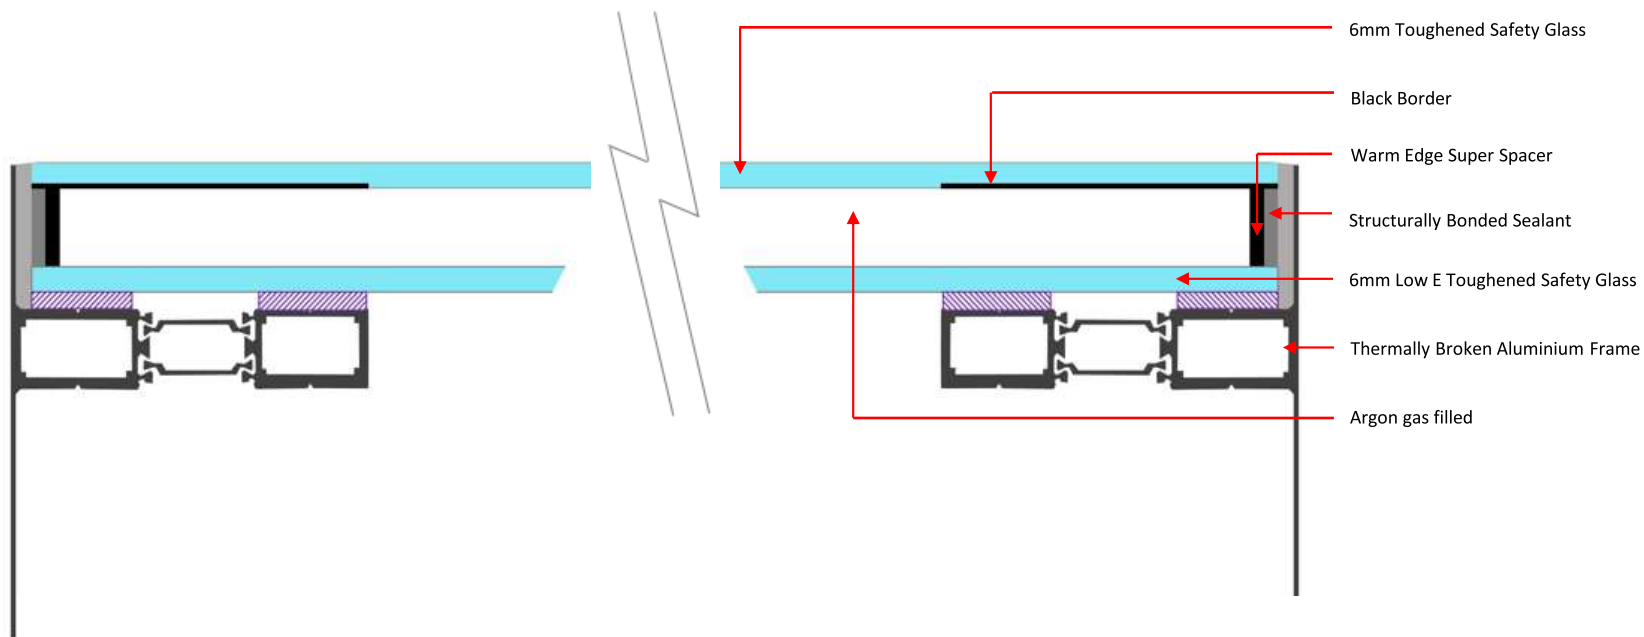

Free Delivery




Drawing not to scale. For illustrative purposes only.

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with the Building Regulations.



FRAMED FLAT FIXED ROOFLIGHT

Installation Guide - double glazed | Option 1: Fixing from Externally


- 1** Apply a thick bead of silicone all the way around the top of the timber upstand/kerb

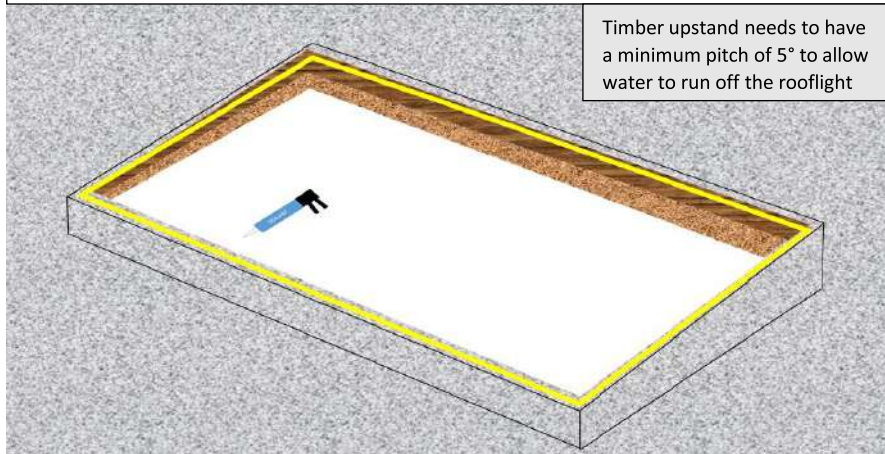

- 2** Position and lower the Rooflight frame over the top and side of the upstand/kerb

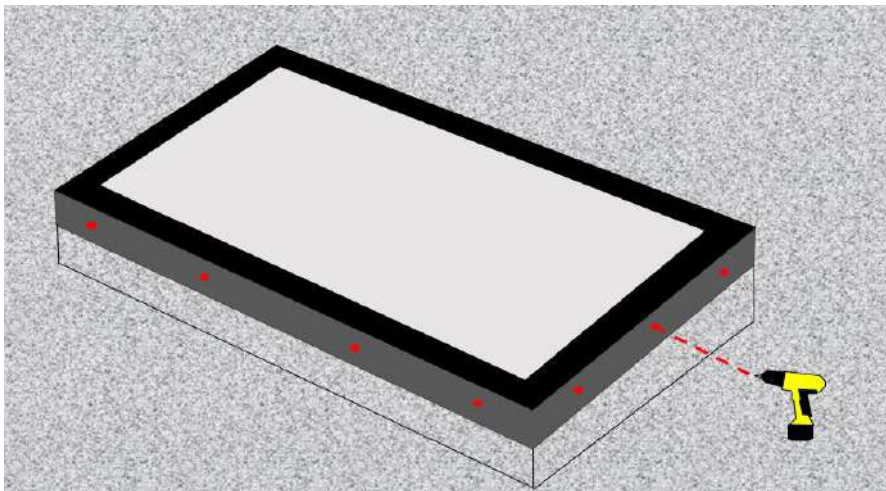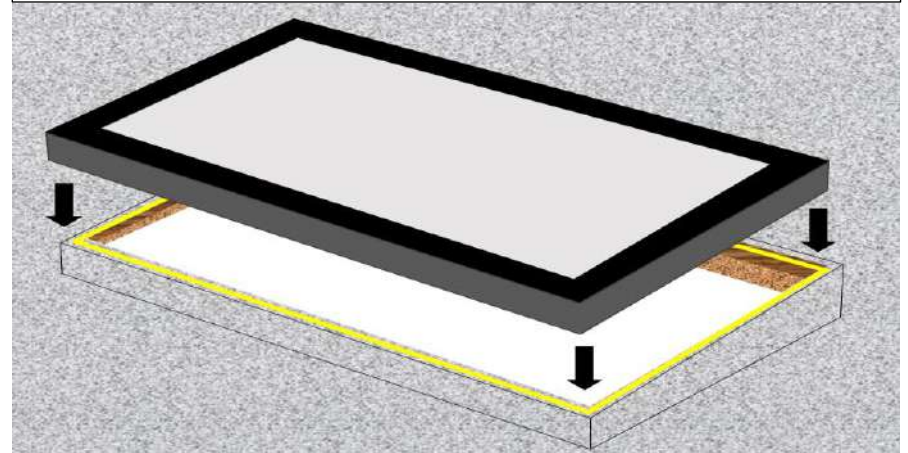

- 3** Pre drill fixing holes through aluminium and timber upstand/kerb at 100mm from each corner and then at regular intervals.

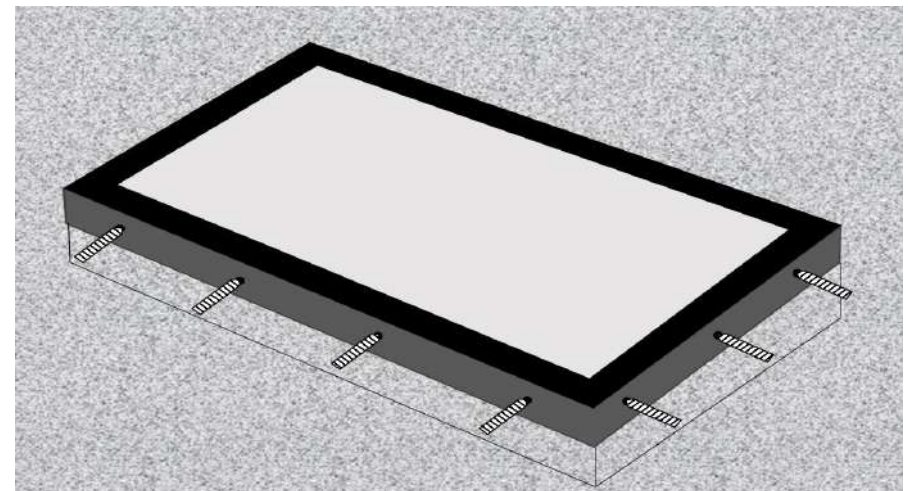


- 4** Secure fixing screws with horse shoe packers and finishing caps continuously all the way around securing the aluminium frame in place.

FRAMED FLAT FIXED ROOFLIGHT

Typical Installation - double glazed | Option 2: Fixing from Internally

Manufactured to: **BS EN 12150 / BS EN 1279**

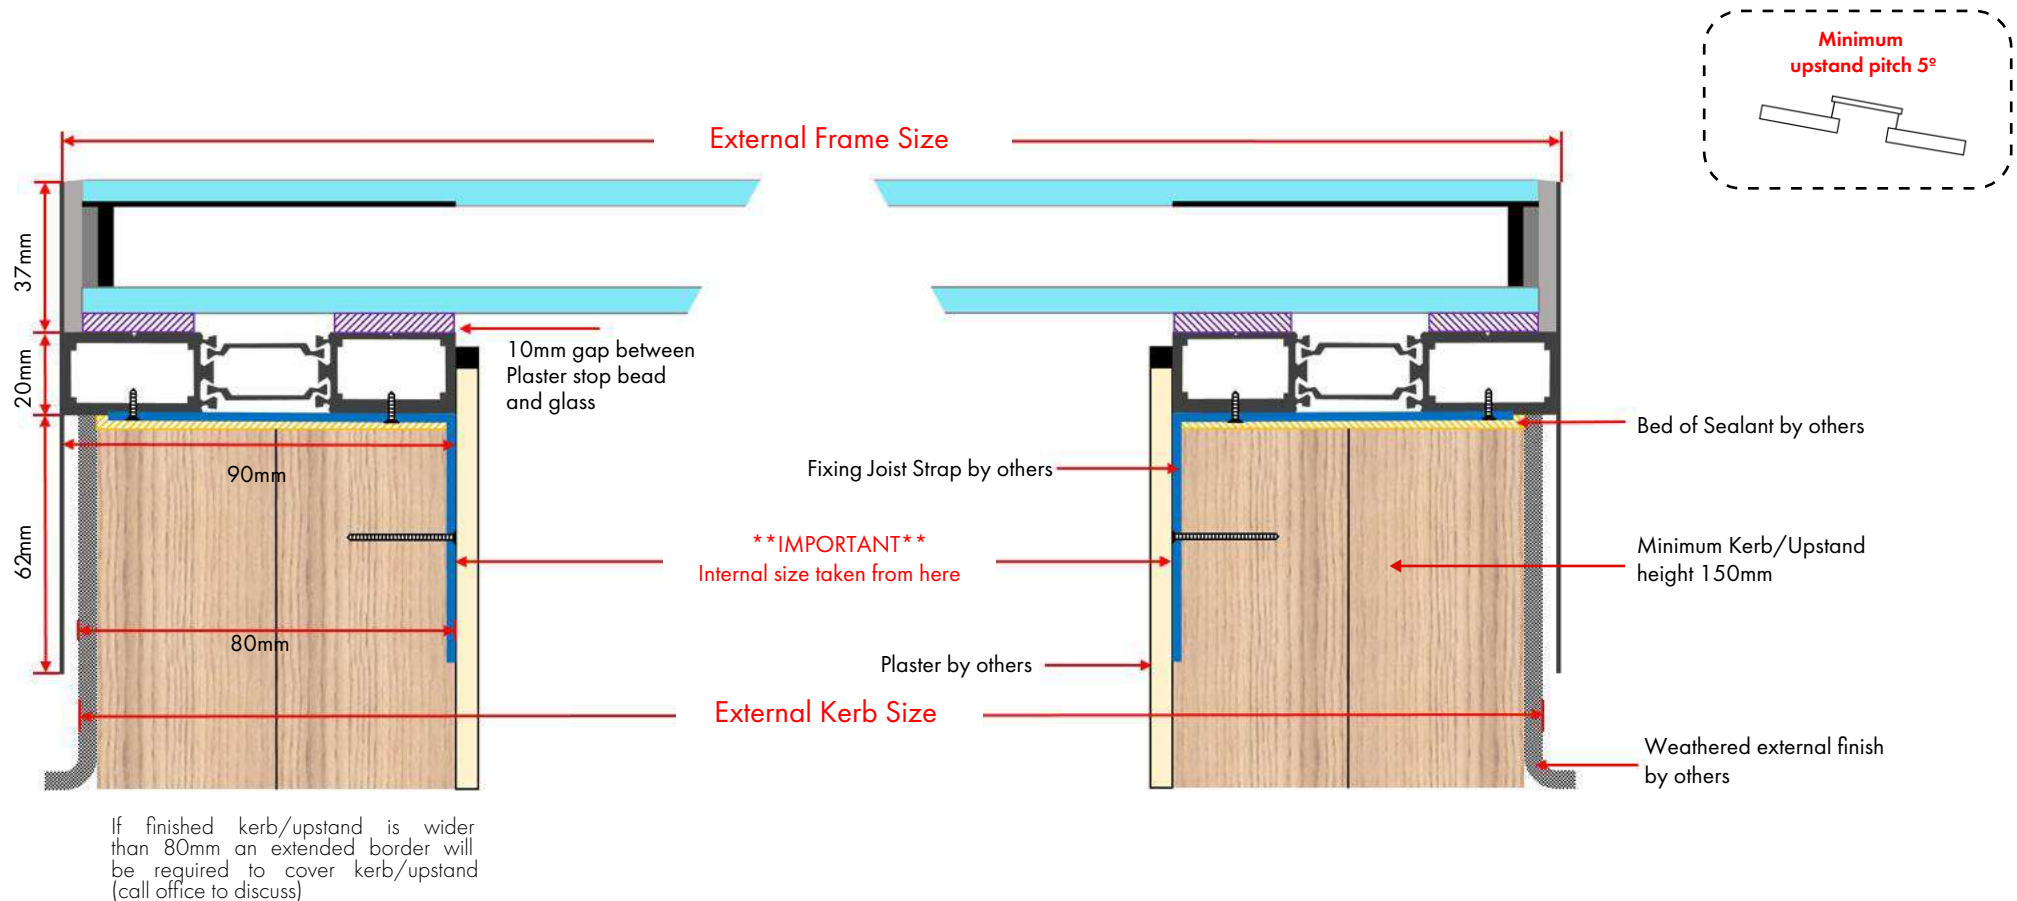

Free Delivery




Drawing not to scale. For illustrative purposes only.

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with the Building Regulations.



FRAMED FLAT FIXED ROOFLIGHT

Installation Guide - double glazed | Option 2: Fixing from Internally


- 1** Apply a thick bead of silicone all the way around the top of the timber upstand

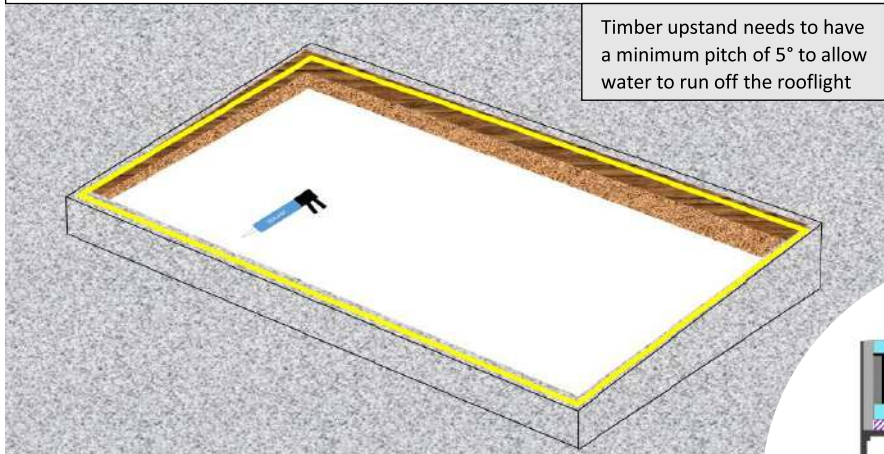

- 2** Position the Rooflight over the upstand ensuring that the fixing straps have been fixed to underside of frame (refer to diagram centre).

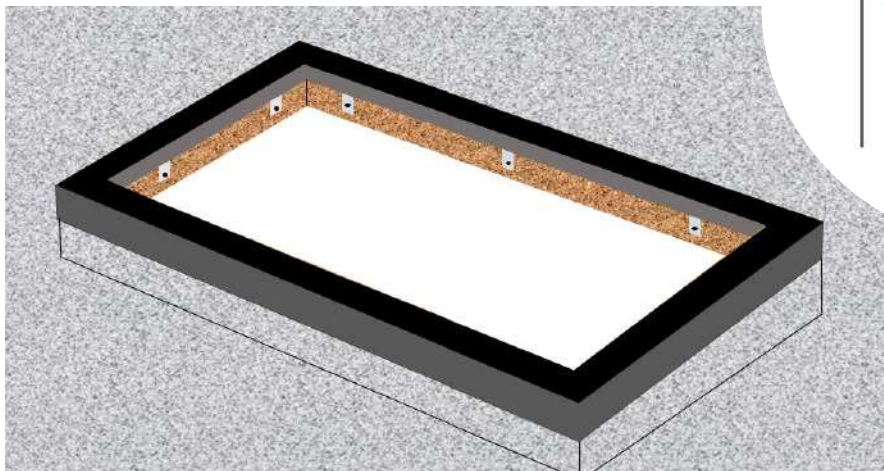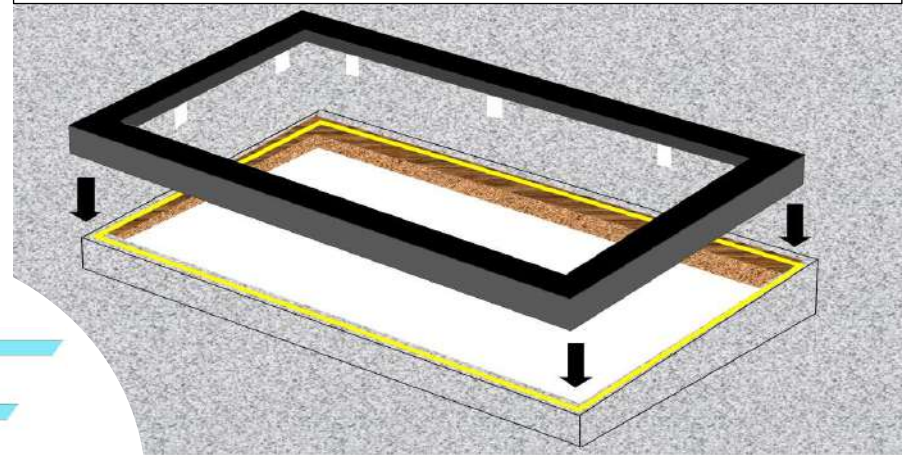

- 3** From the inside secure the fixing straps to inside the timber upstand.

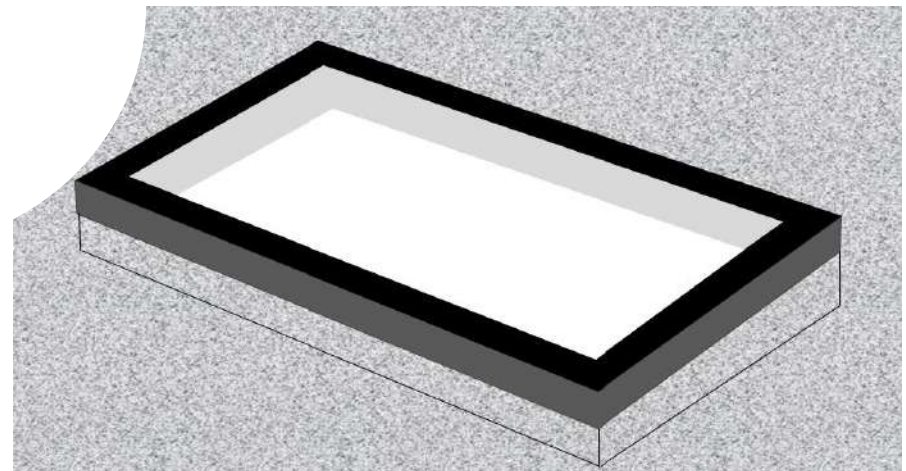


- 4** Internally finish by plaster boarding over the timber and straps leaving at least a 10mm gap from the top of the plasterboard to glass.



FRAMED FLAT FIXED ROOFLIGHT

Installation Guide - double glazed | Option 1: Fixing from Externally


- 1** Apply a thick bead of silicone all the way around the top of the timber upstand/kerb

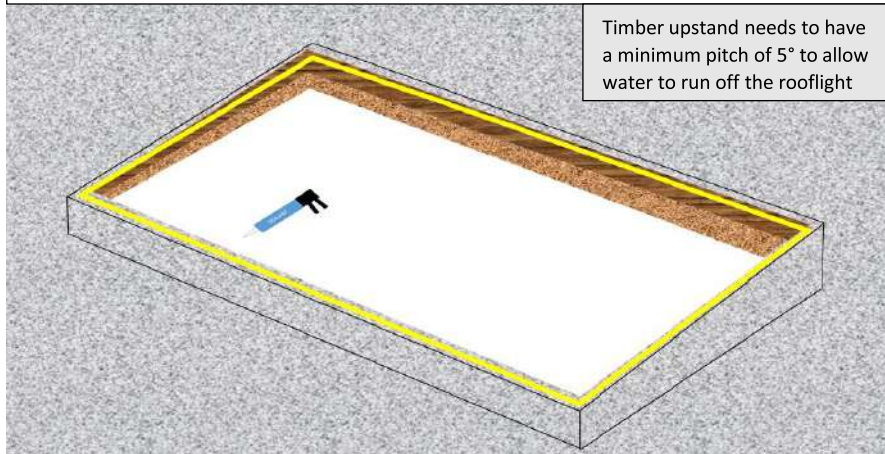

- 2** Position and lower the Rooflight frame over the top and side of the upstand/kerb

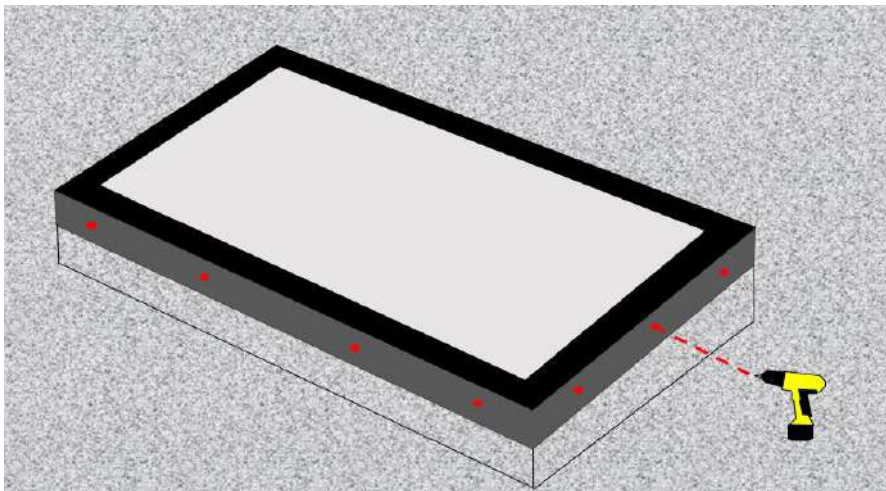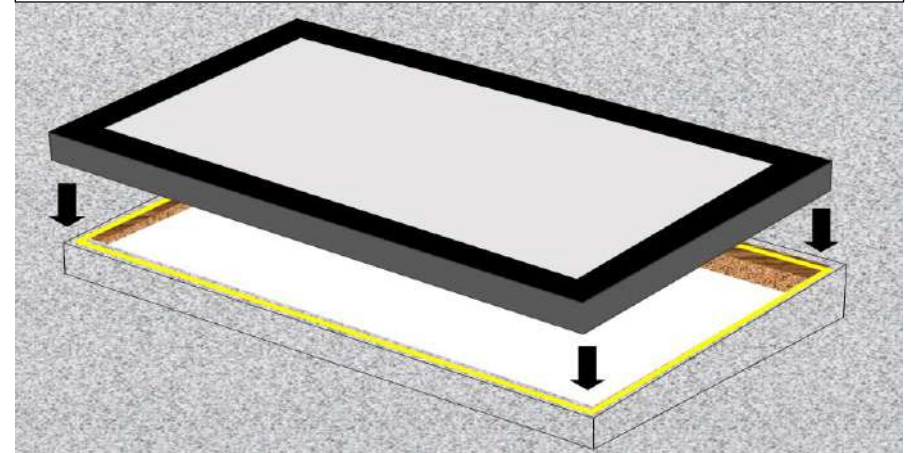

- 3** Pre drill fixing holes through aluminium and timber upstand/kerb at 100mm from each corner and then at regular intervals.

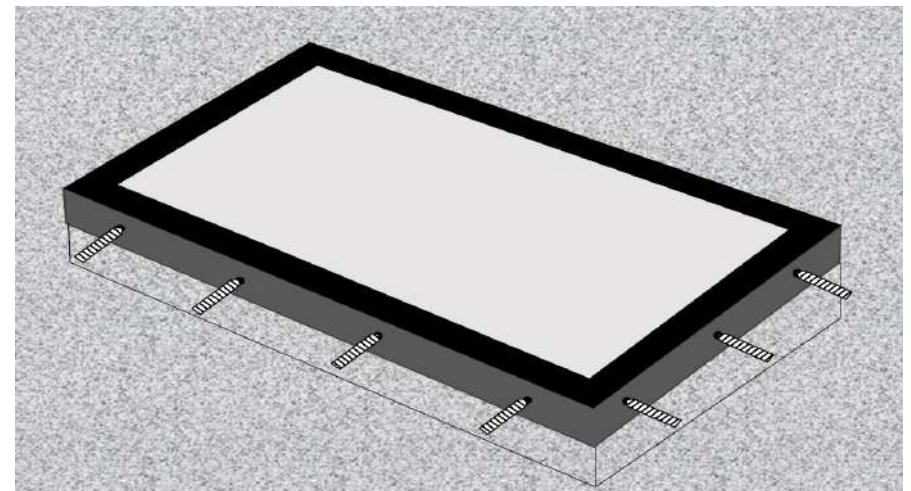


- 4** Secure fixing screws with horse shoe packers and finishing caps continuously all the way around securing the aluminium frame in place.

FRAMED FLAT FIXED ROOFLIGHT

Typical Installation - double glazed | Option 2: Fixing from Internally

Manufactured to: **BS EN 12150 / BS EN 1279**

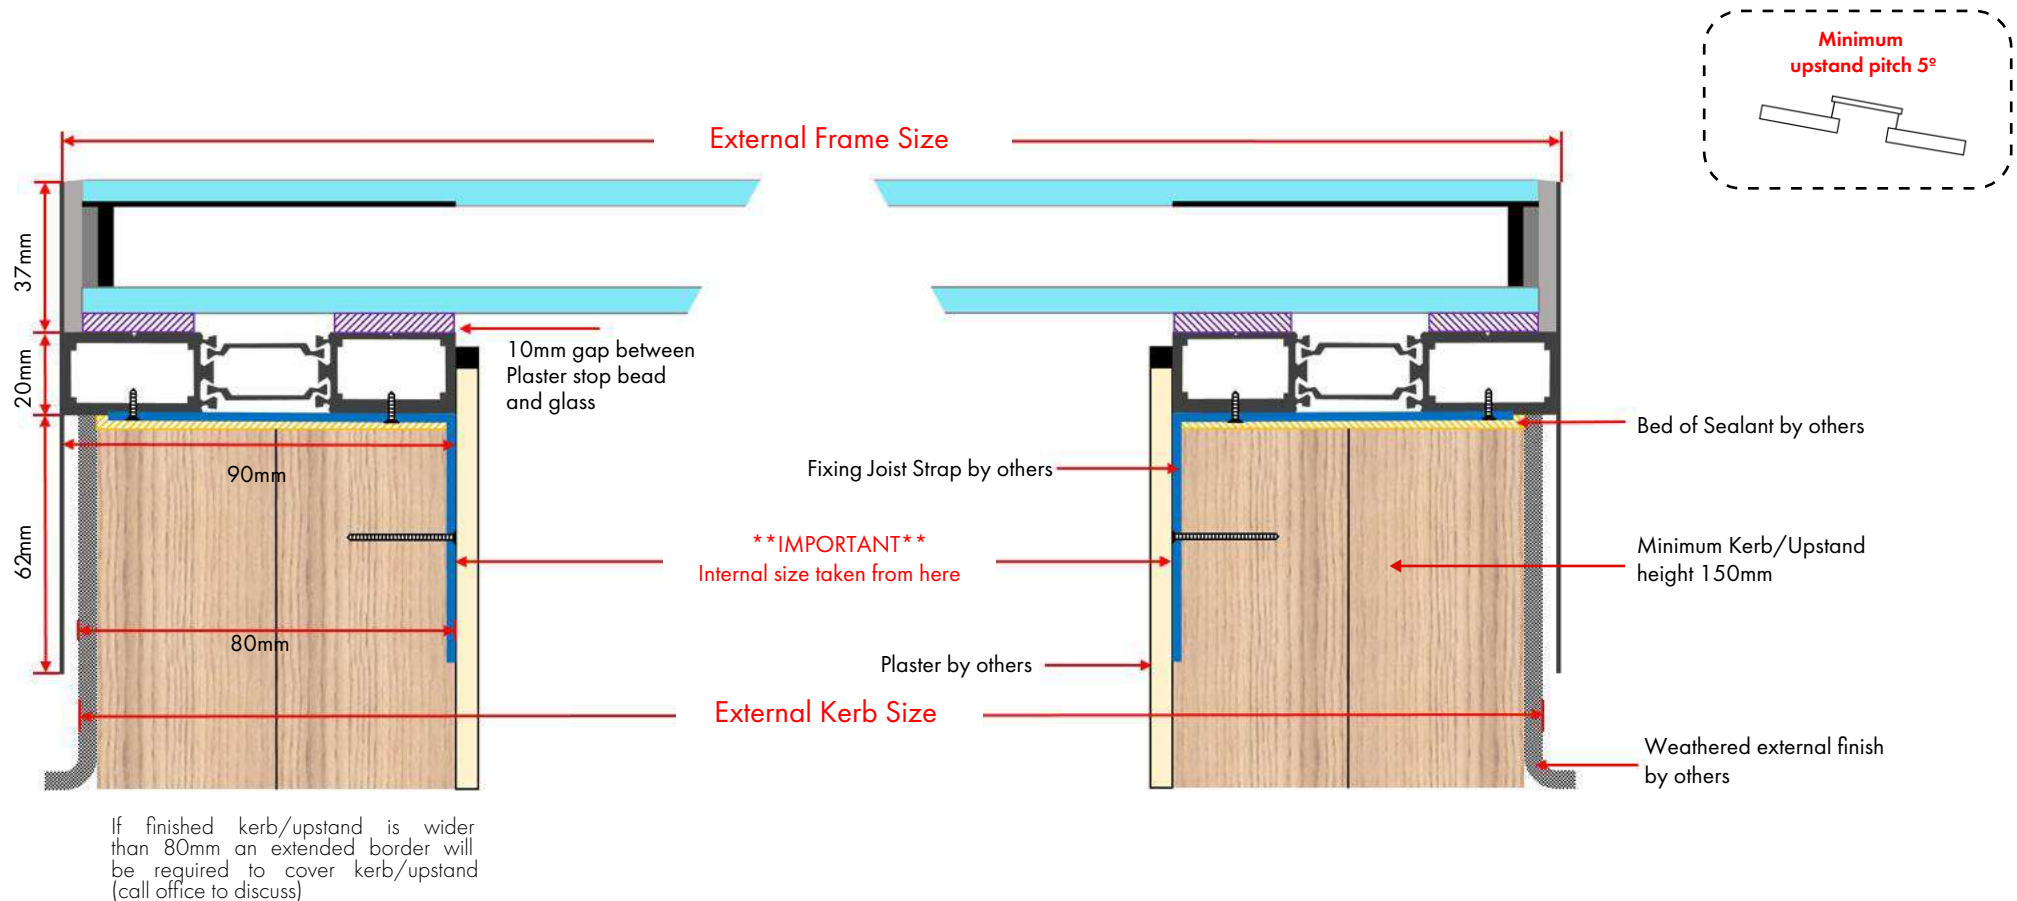

Free Delivery



Drawing not to scale. For illustrative purposes only.

Please note it is the responsibility of the customer to ensure that all products purchased and used are compliant with the Building Regulations.

